



Southeast Aerospace, Inc
1399 General Aviation Dr
Melbourne, Florida 32935 USA
sales@seaerospace.com
Tel: 321-255-9877
Fax: 321-255-9608
www.seaerospace.com

King Air Capabilities List

Part Number	Model	Description	Capability
060-0015-00	KG-102A	Directional Gyro	SEA Repair
066-03062-0000	KEA-346	Encoding Altimeter	SEA Repair
066-03062-0008	KEA-346	Encoding Altimeter	SEA Repair
066-3046-01	KI-525A	H.S.I.	SEA Repair
066-3046-07	KI-525A	H.S.I.	SEA Repair
066-3062-00	KEA-346	Encoding Altimeter	SEA Repair
066-3062-08	KEA-346	Encoding Altimeter	SEA Repair
071-01519-0101	ART-2000	Radar Transceiver	SEA Repair
100-380006-47	267-901-003	Fuel Qty Indicator	SEA Exchange
100-384054-1	RC30V10-1	Vertical Speed Indicator	SEA Exchange
100-384073-1		Fuel Flow Indicator	SEA Exchange
101-384008-3	SR-2AM	Torque Indicator	SEA Exchange
101-384050-5		Oil Pressure Indicator	SEA Exchange
101735-01563	58-380069-5	Altimeter	SEA Exchange
102-0041-33	RCA22-42	Attitude Gyro	SEA Exchange
102235-11868		Altimeter	SEA Exchange
1U262-001-11	4000B-10	Directional Gyro	SEA Exchange
200E		Directional Gyro	SEA Exchange
23-501-016	5000B-10	Horizon Gyro	SEA Exchange
23-501-016-1	5000B-33	Horizon Gyro	SEA Exchange
2587193-43	C-14A	Directional Gyro	SEA Repair
28007-11-01		Encoding Altimeter	SEA Exchange
30-1329-3M		Nav Strobe Light	SEA Exchange
30-1329-4M		Nav Strobe Light	SEA Exchange
30-1329-5M		Nav Strobe Light	SEA Exchange
30-1329-6M		Nav Strobe Light	SEA Exchange
30-1331-5		Nav Strobe Light	SEA Exchange
30-1467-21		Nav Strobe Light	SEA Exchange
5035P-P46		Encoding Altimeter	SEA Repair
50-380034-3		Triple Tach Indicator	SEA Exchange
50-380035-1		Prop Tach Indicator	SEA Exchange
50-380107-5		Torque Indicator	SEA Exchange
50-389102-9		ITT Indicator	SEA Exchange
504-0002-902	500ECF	Horizon Gyro	SEA Exchange
504-0002-918	500ECFB	Horizon Gyro	SEA Exchange
509-0001-904		Turn & Slip Indicator	SEA Exchange
509-0001-910		Turn & Slip Indicator	SEA Exchange
522-2638-006	331A-3G	HSI	SEA Repair
522-2644-011	328A-3G	Slaving Amp	SEA Repair
522-3082-00	331A-3F	Course Indicator	SEA Repair

Part Number	Model	Description	Capability
522-3082-000	331A-3F	Course Indicator	SEA Repair
522-3082-001	331A-3F	Course Indicator	SEA Repair
522-3241-000	332E- 4	Directional Gyro	SEA Repair
5934PA-1A.109		Altimeter	SEA Repair
5934PA-3A.109		Altimeter	SEA Repair
60-1376-10		Power Supply	SEA Exchange
60-1750-3		Power Supply	SEA Exchange
622-0555-003	332C-10	RMI	SEA Repair
622-0965-003	334D-6	Elevator Servo	SEA Exchange
622-1270-001	TDR-90	Transponder	SEA Repair
622-2366-001	334C-9A	Primary Servo	SEA Exchange
622-2501-001	ANT-312	Radar Antenna	SEA Repair
622-2504-001	ANT-318	Radar Antenna	SEA Repair
622-2733-001	334C-11	Elevator Servo	SEA Exchange
622-2733-002	334C-11	Elevator Servo	SEA Exchange
622-2855-001	ALT-55B	Radio Altimeter	SEA Repair
622-2855-011	ALT-55B	Radio Altimeter	SEA Repair
622-3201-001	ALT-50A	Radio Altimeter	SEA Repair
622-3260-001	334D-6A	Trim Servo	SEA Exchange
622-4565-001	332D-11T	Vertical Gyro	SEA Repair
622-7337-001	WXT-250B	Radar Transceiver	SEA Repair
622-9210-007	TDR-94D	Mode S Transponder	SEA Exchange
622-9352-005	TDR-94D	Mode S Transponder	SEA Exchange
7040B-C.77	101-380033-1	VSI	SEA Repair
7040C.5		VSI	SEA Repair
7130C.44		VSI	SEA Repair
787-6385-003	331A-6P	Course Indicator	SEA Repair
792-6694-001	332D-11A	Vertical Gyro	SEA Repair
90-380037-1		Fuel Flow Indicator	SEA Exchange
LT-52A		Lighting Dimmer	SEA Exchange